


CONTENTS

QUICK REFERENCE GUIDE

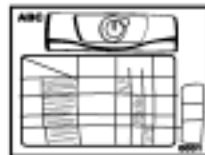

PROGRAMME CHART

PREPARING THE LAUNDRY

SELECTING A PROGRAMME AND OPTIONS


STARTING AND COMPLETING A PROGRAMME

CHANGING A PROGRAMME

INTERRUPTING A PROGRAMME

DAILY MAINTENANCE AND CLEANING

INSTRUCTIONS FOR USE

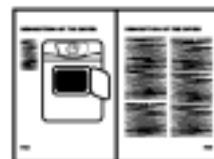

BOOKLET

BEFORE USING THE DRYER / CONNECTIONS PAGE 10

ELECTRICAL CONNECTION PAGE 11

PRECAUTIONS AND GENERAL
RECOMMENDATIONS PAGE 12

DESCRIPTION OF THE DRYER PAGE 13

VENT CONNECTION PAGE 14

DOOR REVERSIBILITY PAGE 15

TROUBLESHOOTING GUIDE / AFTER-SALES SERVICE PAGE 16

BEFORE USING THE DRYER / CONNECTIONS

1. Removing the packaging and check

- After unpacking, make sure that the dryer is undamaged. If in doubt, do not use the dryer. Contact After-Sales Service or your local retailer.
- Keep the packaging materials (plastic bags, polystyrene parts, etc.) out of reach of children, as they are potentially dangerous.

2. Electrical Connections

- Electrical connections must be carried out by a qualified technician in compliance with the manufacturer's instructions and current standard safety regulations.
- Electrical connection must comply with local Electricity Board regulations.
- Voltage information, power consumption and the required fuse protection is shown on the rating plate mounted at the rear of the dryer.
- The manufacturer cannot accept any liability for personal injury or damage to property resulting from failure to adhere to these instructions.
- The dryer must be earthed as prescribed by law.
- Do not use extension leads or multiple adaptors.
- Before any maintenance on the dryer disconnect it from the mains supply.
- Do not operate the dryer if it has been damaged during transport. Contact one of our After-Sales Service technicians.
- Mains cable replacement is only to be carried out by After-Sales Service.
- After installation access to the mains plug has to be guaranteed, or the all-pole disconnection has to be possible with a switch.

3. Installation

- Do not install your dryer where it can be subject to extreme conditions, such as: poor ventilation, temperatures around freezing (or above 35°C).
- Remove the protective foil from the control panel.
- Take care not to install the dryer on a deep-pile carpet.

Stability:

When installing the dryer always carefully level the dryer adjusting the two feet and check the correct levelling with a spirit level.

To built in the dryer

- For security reasons do not remove the worktop.
- Connect the dryer to an external ventilation system in order to prevent steam from damaging your furniture during the years.

Stacking kit

Your dryer can be stacked on top of your front loading washing machine. The type of stacking kit is stated in the Instruction for use of your washing machine or pls. contact your dealer or our After Sales Service.

Minimum housing dimensions:

| | |
|---------|--------|
| Width: | 600 mm |
| Height: | 850 mm |
| Depth: | 560 mm |



ELECTRICAL CONNECTION

1) For Great Britain only

Warning - this appliance must be earthed

Fuse replacement

If the mains lead of this appliance is fitted with a BS 1363A 13amp fused plug, to change a fuse in this type of plug use an A.S.T.A. approved fuse to BS 1362 type and proceed as follows:


1. Remove the fuse cover (A) and fuse (B).
2. Fit replacement 13A fuse into fuse cover.
3. Refit both into plug.

Important:

The fuse cover must be refitted when changing a fuse and if the fuse cover is lost the plug must not be used until a correct replacement is fitted.

Correct replacement are identified by the colour insert or the colour embossed in words on the base of the plug.

Replacement fuse covers are available from your local electrical store.

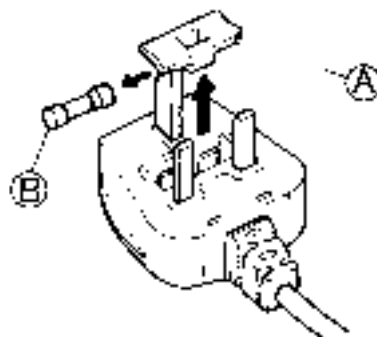

2) For the Republic of Ireland only

The information given in respect of Great Britain will frequently apply, but a third type of plug and socket is also used, the 2-pin, side earth type.

3) Socket outlet / plug (valid for both countries)

If the fitted plug is not suitable for your socket outlet, please contact Whirlpool Service for further instruction. Please do not attempt to change plug yourself. This procedure needs to be carried out by a qualified Whirlpool technician in compliance with the manufactures instructions and current standard safety regulations.

PRECAUTIONS AND GENERAL RECOMMENDATIONS

1. Packing



The packing box may be fully recycled as confirmed by the recycling symbol.

2. Energy saving tips

- Always dry a full load: depending on the type of laundry and the programme/drying time.
 - By preference use the maximum spin speed allowed by your washing machine, since draining the water mechanically requires less energy.
 - Do not overdry the laundry.
 - Clean the lint filter after every drying cycle.
 - Place your dryer in a room with a temperature between 15° C and 20° C. In case of higher temperature ventilate the room.
 - Always select the correct programme/drying time for the load in order to obtain the desired drying results.
 - Select the *gentle* option only with small loads.
 - When drying cotton, for example: dry *iron dry* and *cupboard dry* loads together. Start with the *iron dry* programme/drying time setting, remove the laundry to be ironed at the end of that cycle and dry the remainder of the load on the *cupboard dry* setting.
- ## 3. Disposing of packaging and old appliances.
- The dryer is built from reusable materials. The dryer must be disposed of in compliance with local waste disposal regulations.
- Before scrapping, cut off the power cable so that the dryer cannot be connected to the mains.
- ## 4. Child safety:
- Children must not be allowed to play with the dryer.
- ## 5. General recommendations:
- Always set the programme/time selector knob to the "0" position after use. This prevents the dryer from being switched on accidentally.
 - Before cleaning or carrying out maintenance, switch off the dryer and disconnect it from the mains supply.
 - To clean the outside of the dryer, use a neutral detergent and a damp cloth.
 - Do not use abrasive detergents.

Clean the lint filter at the end of every drying cycle:

1. Open the door.
2. Pull the filter upwards.
3. Remove lint using a soft brush or your fingertips.
 - Push the filter firmly back into place.
 - Wipe away lint from the door seal and the door using a damp cloth.
 - If the lint filter mesh is clogged, clean it with water and a soft brush.
 - If necessary, the power cable may be replaced with an identical one obtained from our After-Sales Service. The power cable must only be replaced by a qualified technician.

EC Declaration of Conformity


- This dryer has been designed, constructed and distributed in compliance with the safety requirements of EC Directives:
 - 73/23/EEC Low Voltage Directive
 - 89/336/EEC EMC Directive
 - 93/68/EEC CE Marking Directive.



- The dryer must be used in the household for the described uses.

DESCRIPTION OF THE DRYER

- A. Work top
- B. Contact pin
- C. Door
 - To open the door:
pull the handle
 - To close the door:
push gently until closed.
- D. Filter

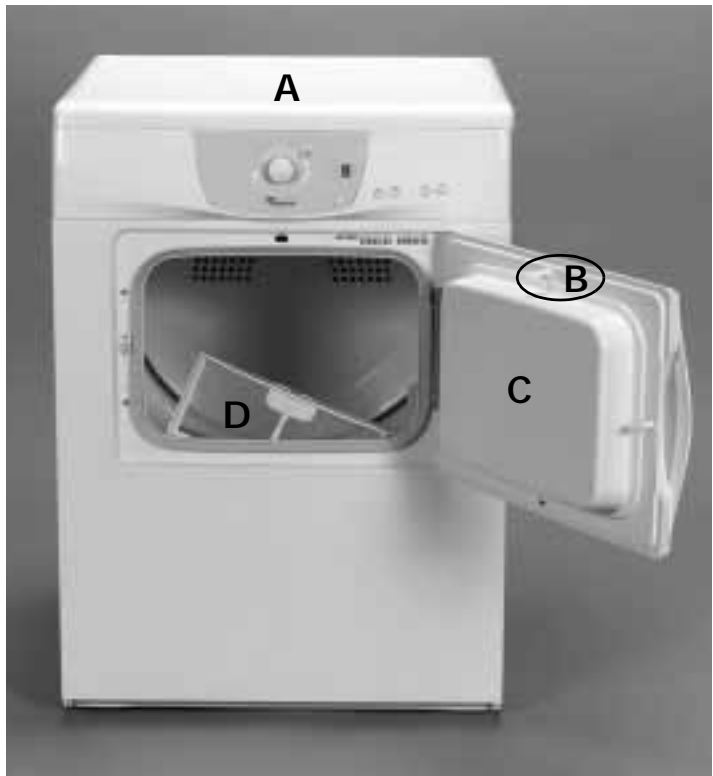

Reminder - Maintenance and Cleaning

Clean the lint filter at the end of every drying cycle:

Open the door.

Pull the filter upwards.

Remove lint using a soft brush or your fingertips.

VENT CONNECTION

Normally the hose and adaptor are not supplied; the accessory AMH 577 kit, available at your dealer or our After Sales Service, should be used.

Installing the vent hose

- A. Place a towel or the packing material on the right-hand side next to the dryer.
- B. Place the dryer on its right-hand side (seen from the front) on the towel or the packing material.
- C. Push the adapter into the hose (see illustration). Attach the air vent hose adapter to the connection located under the dryer and lock it by means of the foreseen lugs.

Venting outside

- Without kinking it, lead the vent hose outside (inside diameter 10 cm, maximum length with two bends 3 m).
- Ensure that the vent hose does not sag when stacking the dryer on a washing machine. It should only be placed horizontally or upwards.
- Do not connect to ventilation systems protected by fly nets. These can become clogged and cause malfunctioning of the dryer.
- Do not connect the air vent hose to a chimney or to a mechanical ventilation extractor duct.
- Do not connect the vent hose to the heating system. Only connect the hose to ventilation systems insulated against humidity.
- Please provide adequate ventilation to avoid the back flow of gases into the room from appliances burning other fuels, including open fires.




Dryer operation without vent hose

- Only use the dryer in a large, well-ventilated room.
- Keep the room free of dust and lint.

A minimum distance of 10 cm between rear of appliance and the wall must be observed.

Dryer placed close to the wall; venting to the left or right




Install the dryer by using the bi-directional kit AMH 869, available at your dealer, should be used.

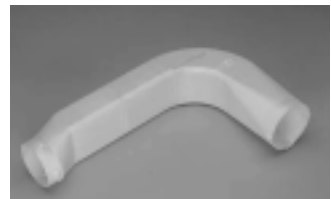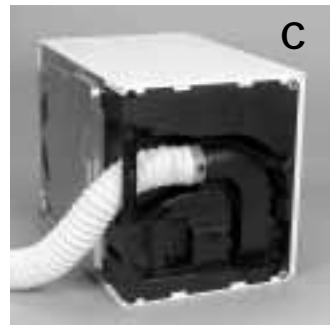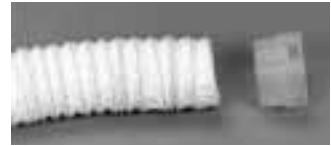

DOOR REVERSIBILITY

Door Reversibility

- A. **Unplug the dryer.**
- B. Open the door.
- C. Using a spanner, turn the contact pin on the inside of the door (top) through 90° and remove it.
- D. Remove the 2 door hinge screws, followed by the door.
- E. Unscrew the 2 screws above and below the door lock system.
- F. Removing the door lock: using a screwdriver, press down on the small rib in the upper opening and extract the door lock by pulling it towards you.
- G. Reverse the door:
- H. Fasten the door on the desired side using the 2 screws.
- I. Insert the door lock system on the opposite side and lock it securely.
- J. Fix the 2 screws above and below the door lock system.
- K. Replace the contact pin in the inside of the door (top).

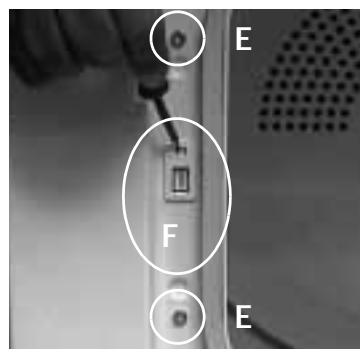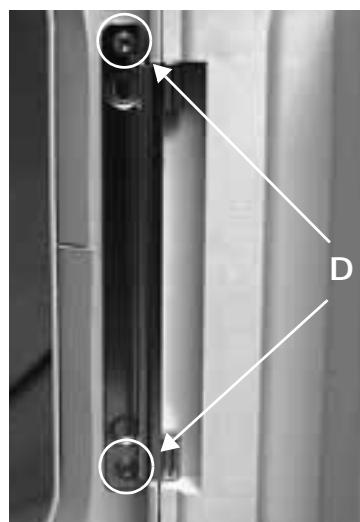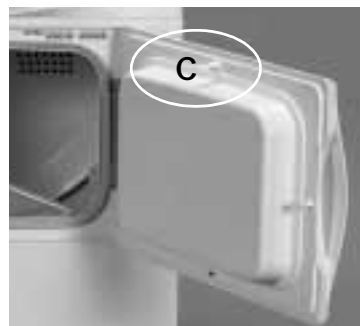

TROUBLESHOOTING GUIDE / AFTER-SALES SERVICE

Troubleshooting Guide

If a fault occurs, before contacting our After-Sales Service, make the following checks to try and remedy the problem:

Drying takes too long / laundry is not dry enough:

- Was the correct programme selected?
- Was the inserted laundry too wet (Washing machine spin speed less than 800 rpm)?
- Is the lint filter dirty (filter indicator lamp on)?
- Does "END" and "Anti-Crease" LED's are lights up? - The drying cycle is terminated, the laundry can be taken out.

The dryer does not operate:

(following a power failure and/or interruption to the mains supply, always press the Start button).

- Is the plug properly inserted into the mains electricity socket?
- Is there a power failure?
- Has the fuse blown?
- Is the door well closed?
- Has the programme been selected?
- Has the start delay option been selected?
- Has the **Start/Pause** button been pressed?

Lint filter indicator lamp light on:

- Is the lint filter clean?
- Is the vent hose blocked?

After-Sales Service

If, after carrying out the above checks the malfunction persists or appears again, turn the dryer off and call our After-Sales Service (refer to guarantee).

Please specify:

- The nature of the fault.
- The dryer type and model.
- The service code (the number after the word Service on the adhesive rating plate) on the right-hand side when the door is open.
- Your full address and phone number.

SERVICE 0000 000 00000

